


Lugano 0200



Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

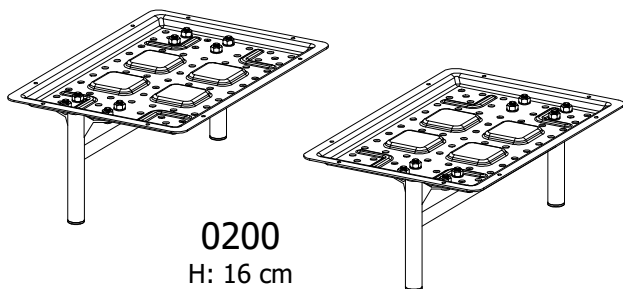


0200
H: 16 cm

Lugano

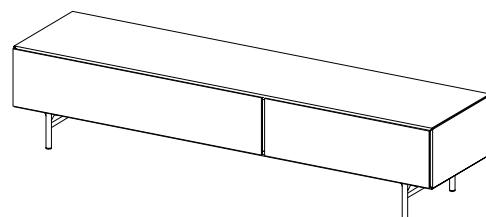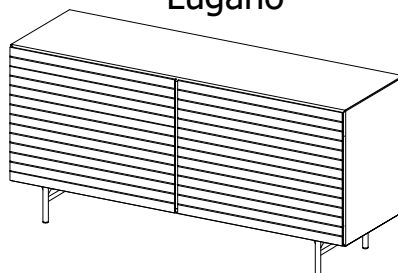

EX.

Model 0200

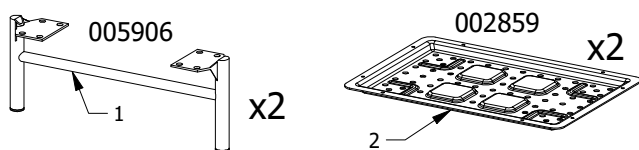

Model 0200 Beslag - Beschlge - Fittings - Set de montage Fittingbag 937000116



C x 16
979900200
M8x16 mm



D x 16
979900194




E x 16
970000883



F x 1
970001890



G x 16
970000786



H x 1
970001693
5 mm

Coll. 0212-0222 Fittingbag 967000171



J x 4
979900251
M8 x 50 mm



D x 8
979900194
Washer



E x 4
970000883
M8 Nut



L x 2
970000838
5,0 x 70 mm




K x 2
970001118
Washer





M x 1
no. 0612 = 002870
no. 0622 = 002868

FIG.
1

EX.

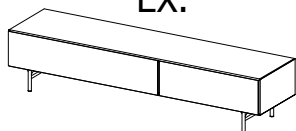

EX.

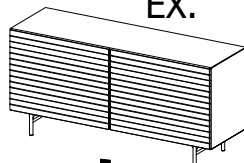

B x 1



C x 16



D x 16



E x 16



F x 1

EX.




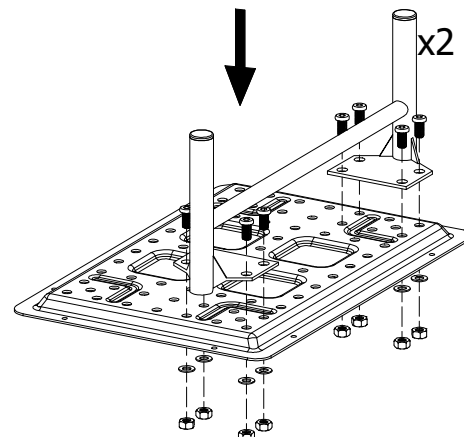



FIG.
2

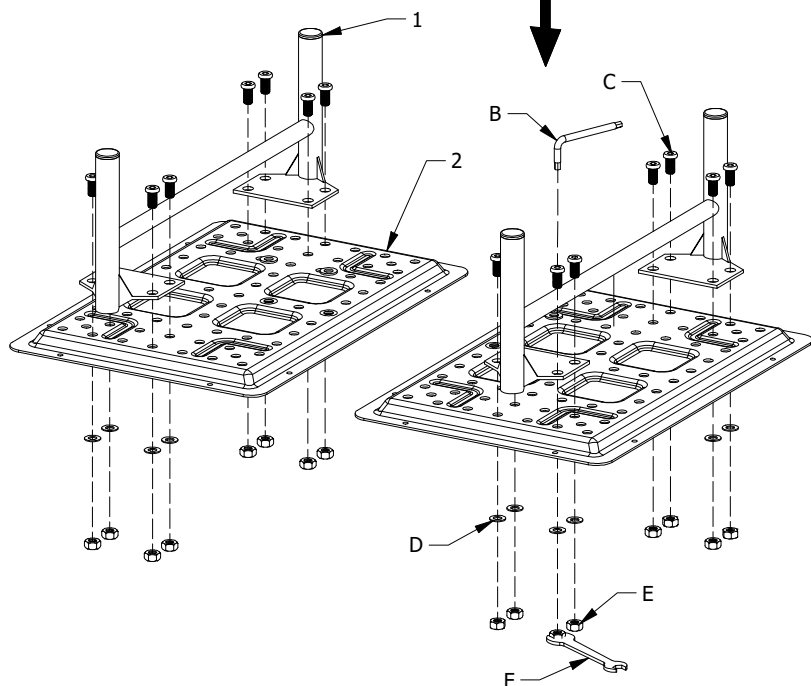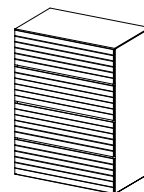

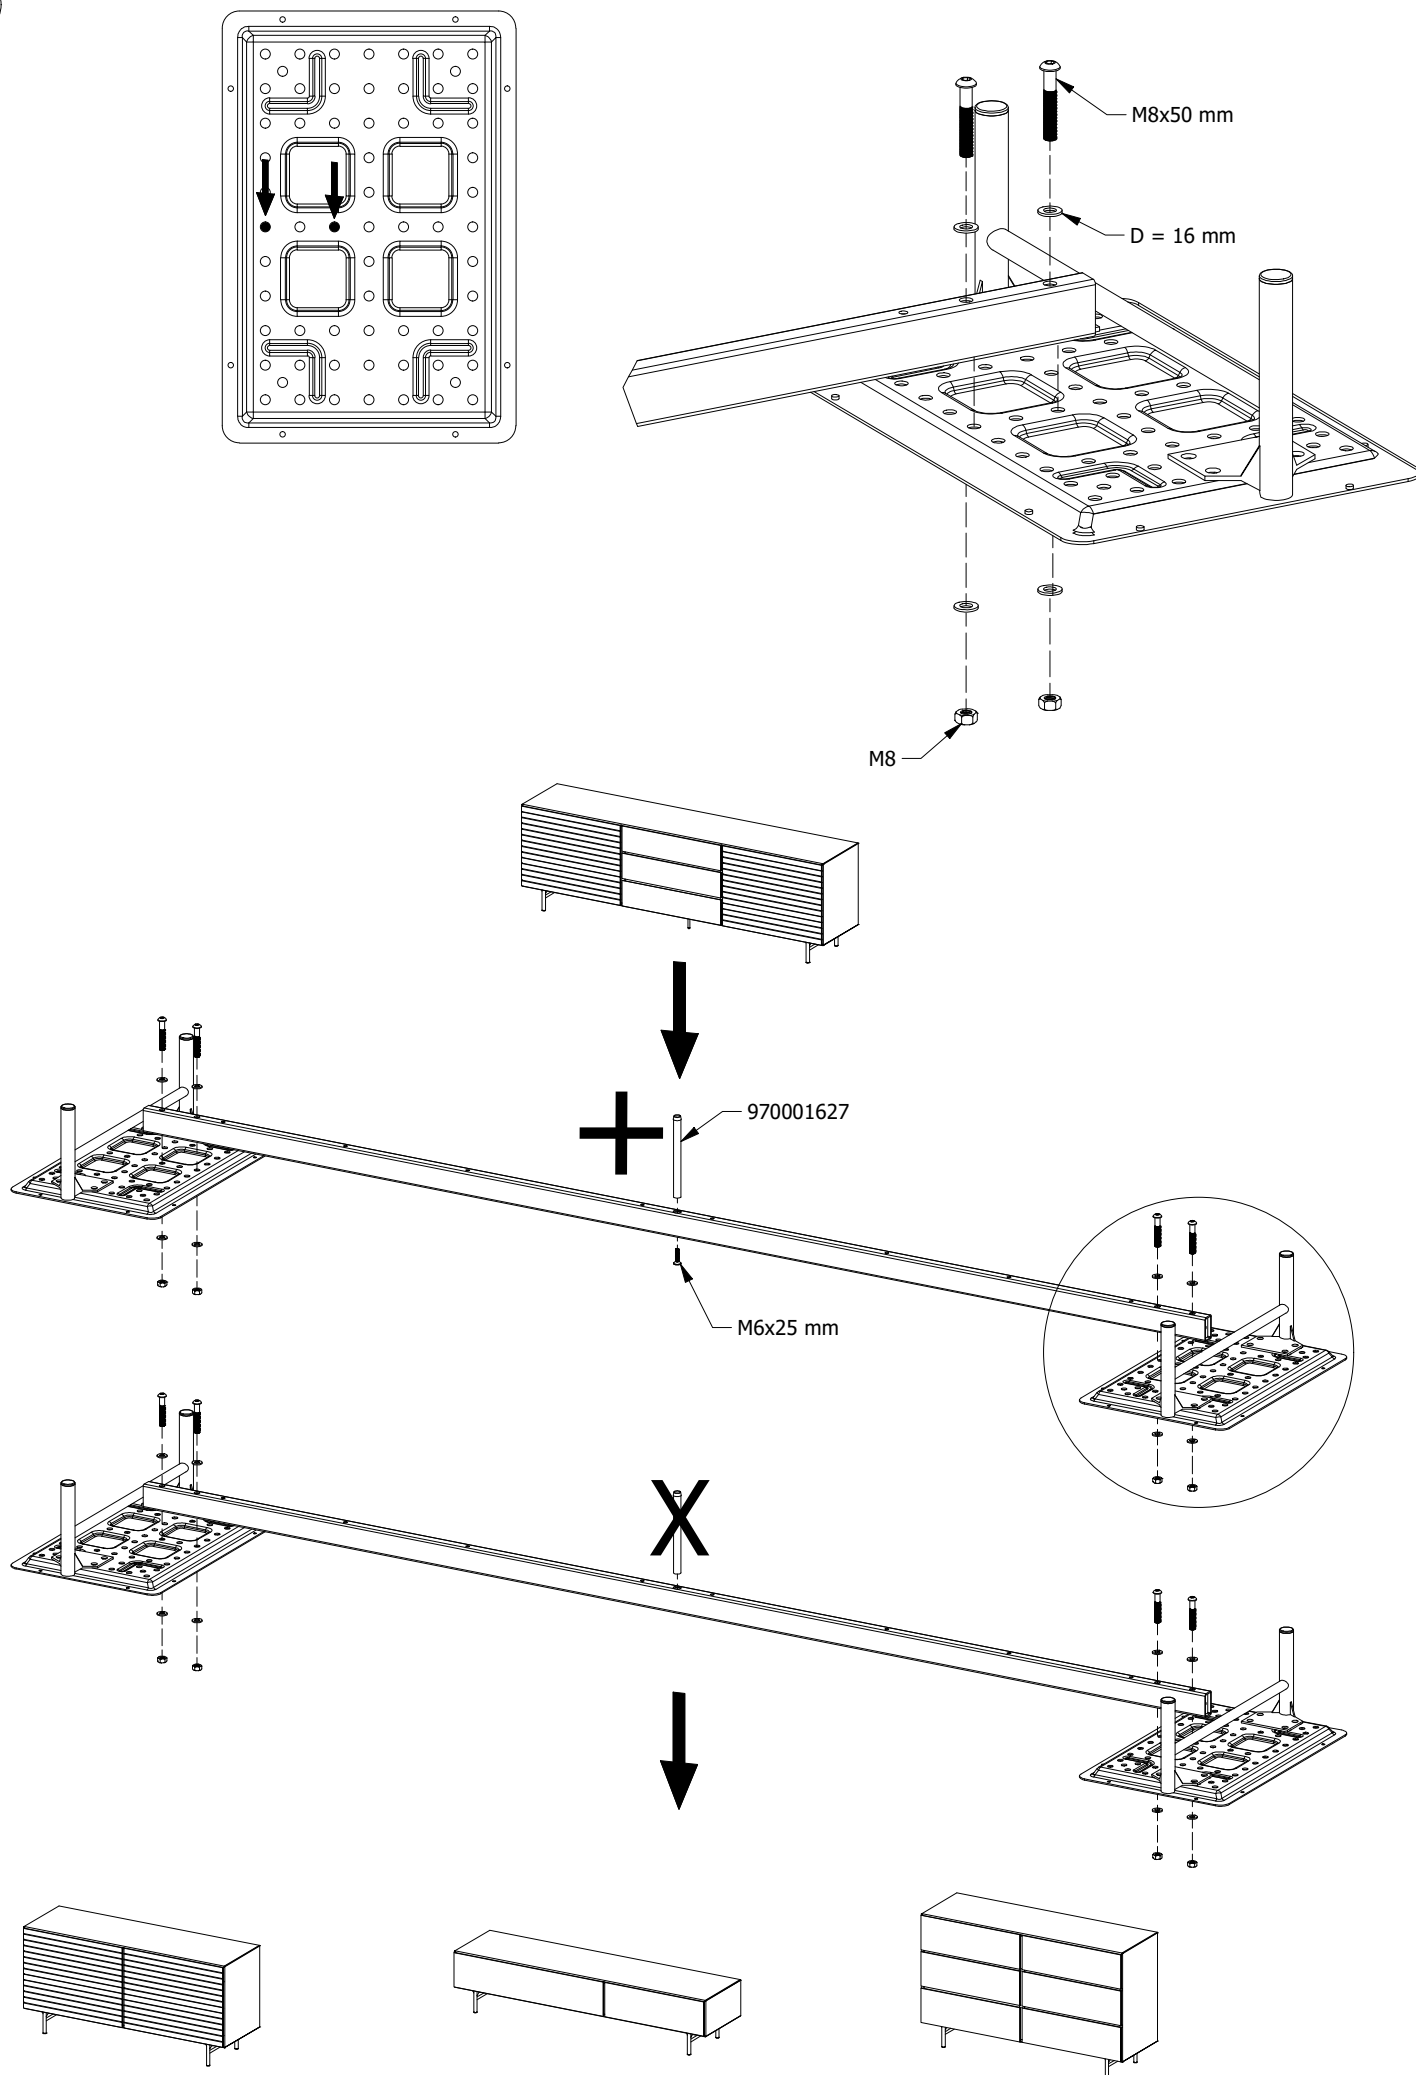

G x 16

Important

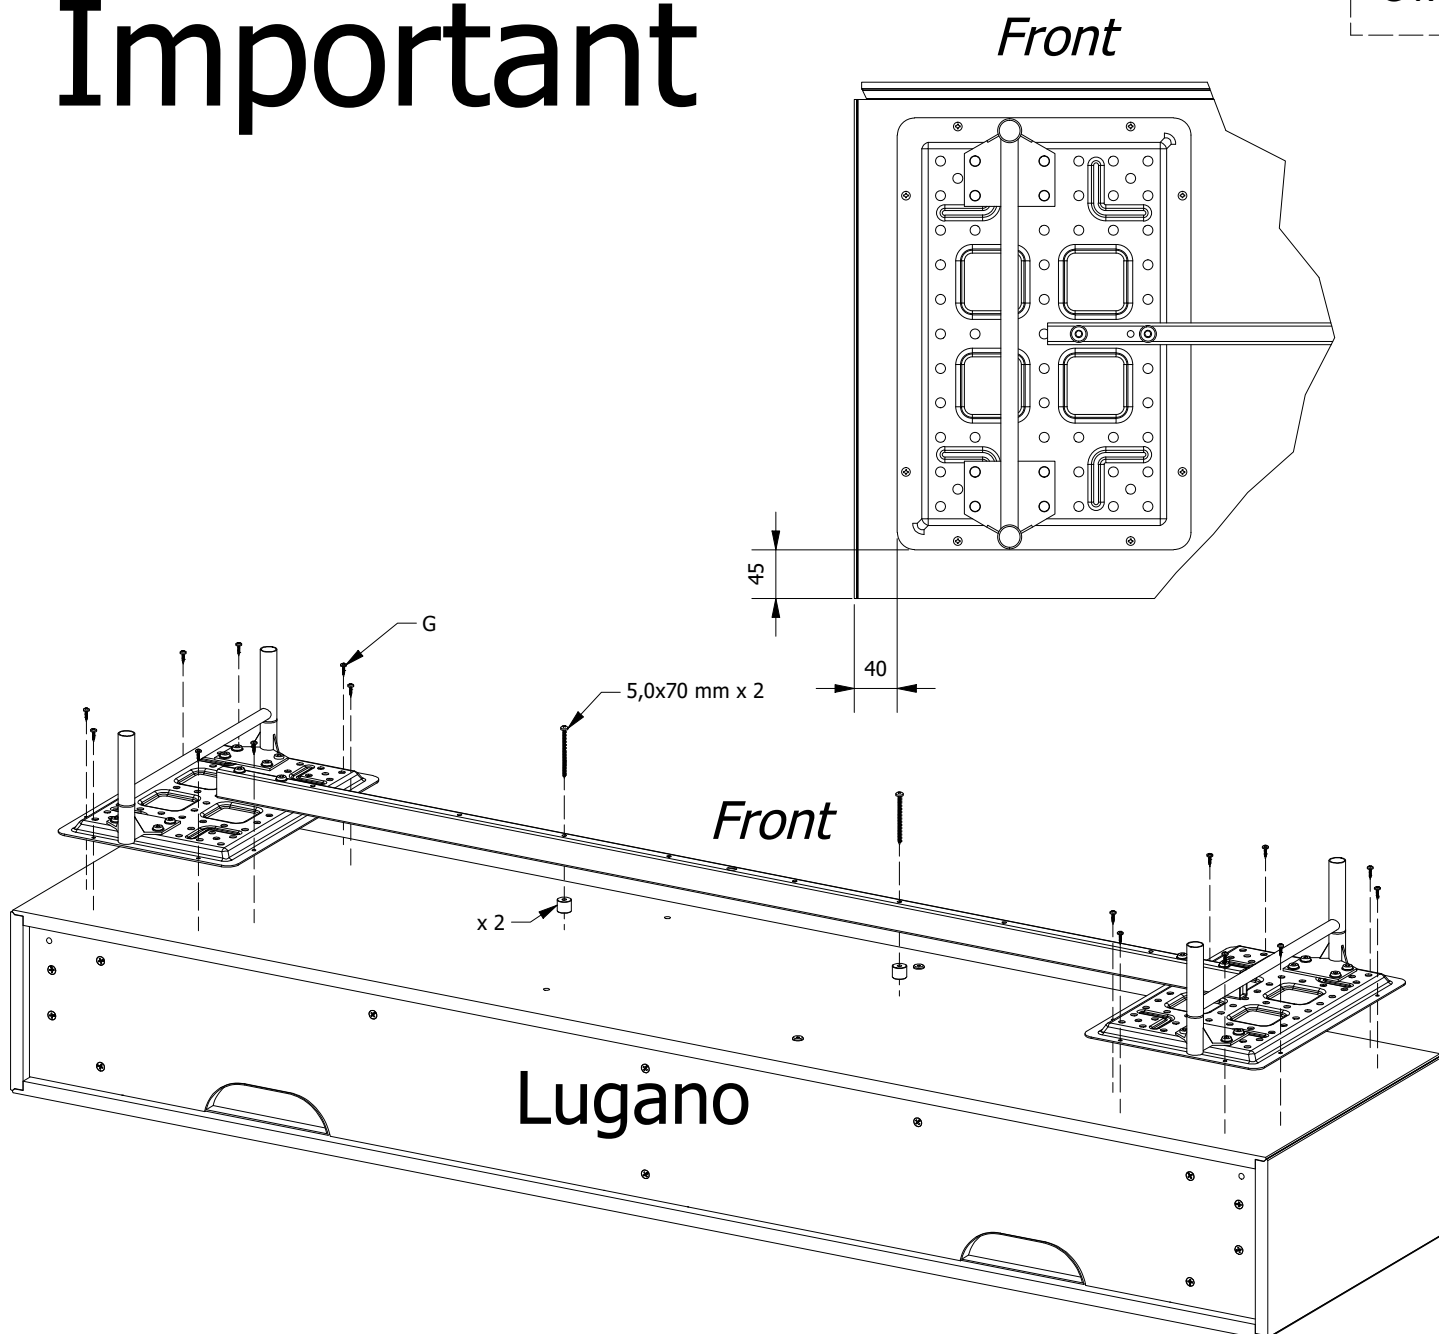

DK Ved reklamation oplyses følgende:

D Im Reklamationsfall, bitte folgendes erläutern:

US In case of claims, please state the following:

F En cas de réclamation, veuillez indiquer:

NL Bij service volgenv mededelen


E En caso de reclamación, indicar lo siguiente:

P No caso de reclamação, por favor indique o seguinte:

JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

Korpus - Korpus - Carcase - Carcasse

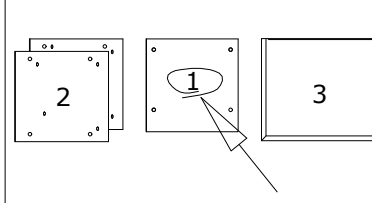

Beslag - Fittings - Beschläge - Set de Montage

